

Reconnect PM5 to the Previously Connected Host Device

If you'd like to reconnect PM5 to the host device most recently connected, you can refer to this article.

You can reconnect PM5 by pressing button combination or QR code.

Before Start

- Reconnection is available for SPP and HID mode. (Unavailable for HID LE mode)
- The PM5 and the host device must be connected at least one or more times after the factory reset.


APPLIES TO

PM5

- by Button Combination: 92.06 (Feb 07 2022) and later
- by QR Code: 92.08 (Nov 24 2023) and later

Reconnect by Button Combination

Supporting firmware version: Available from 92.06 (Feb 07 2022).

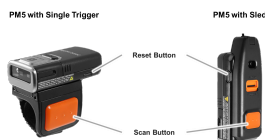

1. While pressing reset button on PM5, press and hold the scan button on trigger accessory.
2. Release the buttons when blinking green LED.
3. Press shortly the scan button on trigger accessory.

Note:

- Do 2~3 steps within 5 seconds after blinking green LED.
- If no device information is connected before, PM5 emits a long beep sound and red LED blinks three times.

Reconnect by QR Code

Supporting firmware version: Available from 92.08 (Nov 24 2023).

Scan the following QR Code.



PM5 Reconnect

RELATED ARTICLES

- [Creating PM5 Connect Barcode](#)
- [How to Disconnect PM5 with Host device?](#)
- [PM5 Bluetooth Disconnection Timeout](#)
- [Find PM5 Information in RingControl](#)
- [Change PM5's Bluetooth Class](#)