


RFID Sled LED Indicator

Applies to

RF850, RF800

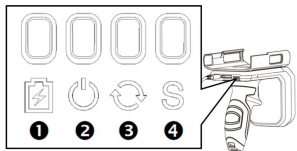

1. Charging LED	Solid Red	Battery is charging
	Solid Green	Battery is fully charged
2. Power LED	Solid Red	Power is On
	Blinking Red	Power is low
	Solid Green	BT is connected
	Blinking Green	BT is connected and power is low
	Solid Orange	USB connected to PC
	Blinking Orange	USB connected to PC and power is low
3. Mode LED	Red	BT SPP connected
	Green	BT HID connected
	Orange	Connected to BT pairing app or USB connected
4. Status LED	Red	UHF RFID ready
	Green	Barcode scan ready

If all LED indicators except charging LED blinking at the same time, it indicates the battery is too low to turn on the reader.
In this case, charge the reader enough.