

# How to Set Static IP for Ethernet Connection

To use static IP for ethernet network, refer to this article.

## APPLIES TO

All Point Mobile devices supporting Ethernet connection

## How to Set Static IP

1


Connect Ethernet cable to your device through USB connector or compatible ethernet cradle.

2

Go to **Settings > Network & Internet > Ethernet**.


3

Tap **IP Assignment** and select **Static IP**.

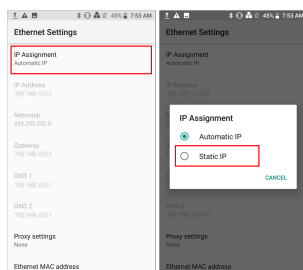

4

Tap **IP Address** and enter the IP address. And enter other needed information.

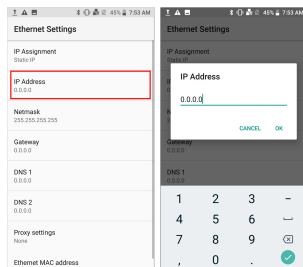

## RELATED ARTICLES

- [How to Set Subnet Mask for Static IP](#)