

Charging PM75/PM90 & RF750/RF900

This article describes the charging scenario of individual or assembled RF750/900 and PM75/90.

APPLIES TO

- RF750 + PM75
- RF900 + PM90

Way of Charging

There are 5 ways to charge the devices in assembled state.

- Connect USB cable to RFID reader
 - From power adapter
 - From PC
- Connect USB cable to host device
 - From power adapter
 - From PC
- Using a charging cradle (SSC; Single Slot Cradle)

Charging Scenario

		RFID reader	RFID reader + host device (Mounted)*
Connect cable to RFID reader	Power adapter	Charges the RFID reader	Charges the RFID reader only
	PC	Charges the RFID reader slowly	
Connect cable to host device	Power adapter		Charges the host device → RFID reader sequentially (After the host device is fully charged, the RFID reader will be charged)
	PC		Charges the host device only
Using a charging cradle (SSC)			Charges the RFID reader and host device at the same time

** It means the wired connection between the RFID reader and the appropriate host device.*

RELATED ARTICLES

- [Charging RF850, RF800](#)
- [Connect RFID Readers](#)
- [Differences between RF850 and RF851](#)