


PM451, PM351 Symbol Grid Setting

PM451 and PM351 have a key that helps to input more character.
The key is called 'symbol key' or 'target key' and place on the keypad on the PM451/PM351.

<Example: PM451>

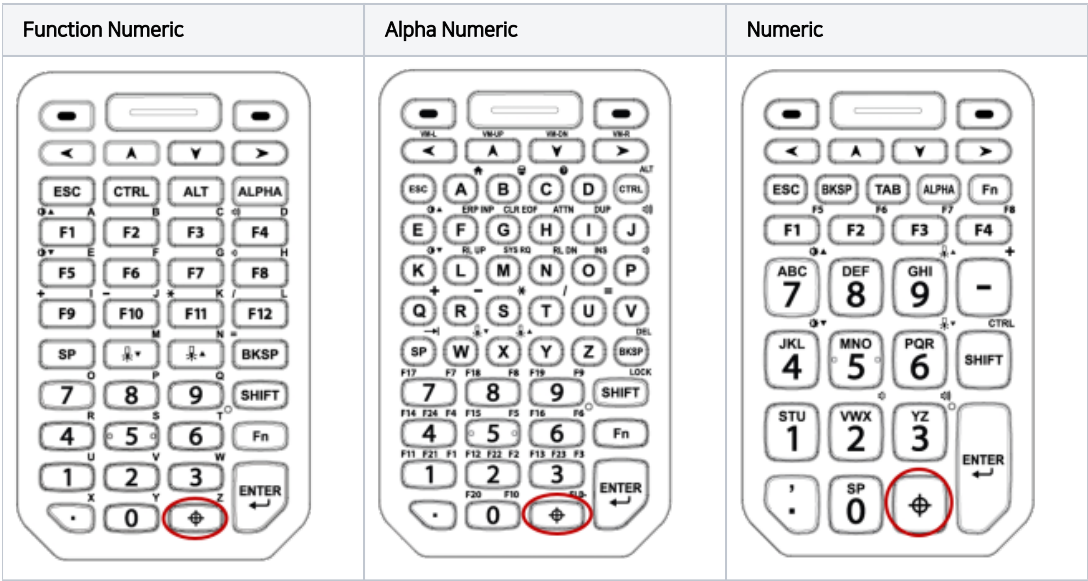

The operation of pressing the key is as below.


Number of presses	Operation
Press once	Input a symbol you set. By default, '~' will be inserted
Press twice	Provide a 3x3 grid on the screen with nine additional symbols. Tap a symbol you want and press the target key one more to input the selected symbol.
Press three times	Hide the symbol grid

APPLIES TO

PM451, PM351

Set up the symbol grid

1. Navigate to **EmKit > Program Buttons > ADVANCED** Tab
2. Check the Symbol grid and tap a cell you want to change

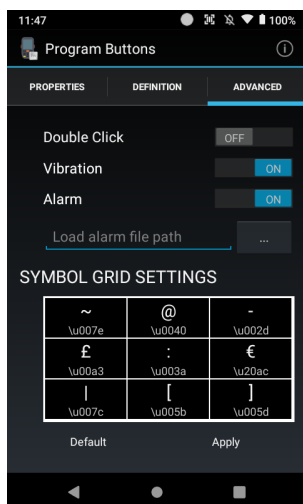

3

Input a Unicode of the desired symbol (character) and tap **OK**

To find the unicode, see below page (Wikipedia)

List of Unicode characters

4

After setting up the symbol grid, tap Apply on the bottom to save the changes



RELATED ARTICLES

- [Set Key Macro in Program Buttons](#)
- [Go Home Screen with Hardware Button \(PM451\)](#)