

Set Illumination Brightness via Provisioning Profile

For some scanner, the illumination brightness level becomes adjustable. Refer to the [Illumination Brightness Level](#).

If you want to set up the level in the provisioning process, read this article carefully and follow the steps.

APPLIES TO

Creating a profile

- Scan2Stage: v10.0.15 and higher
- PMDM console

Applying the setting

- PMDMAgent: v1.0.0 (or EmKitAgent: v2.2.26 and higher)

Set Illumination Brightness

1

Navigate to **Scanner**.

2

Select **Apply Scanner Settings** checkbox.



3

 
Select a scanner type.

(Refer to the [Illumination Brightness Level](#) to find which scanner type supports the illumination brightness. If you select not supporting type, the illumination setting does not show.)



4

Go to **Options**.



5

Set the Illumination level.



6

Save the profile, and perform a provisioning.

- Scan2Stage: [Provisioning with JSON](#)
- PMDM:
 - Using Smart Group: [Associating Profiles](#)
 - Individual sending: [Sending a Profile](#) / [Sending a JSON Profile](#)



RELATED ARTICLES

- [Turn On / Off Scanner Illumination](#)
- [Illumination Brightness Level](#)