

# PM30, PM67, PM75 Factory Reset

Factory reset will erase all data from your device's internal storage.

You have a problem with your device or you want to reset your device, you may use factory reset.

---

## APPLIES TO

PM30, PM67, PM75

---

## How to Factory Reset

- If you can turn on the device and use the Settings app,

1

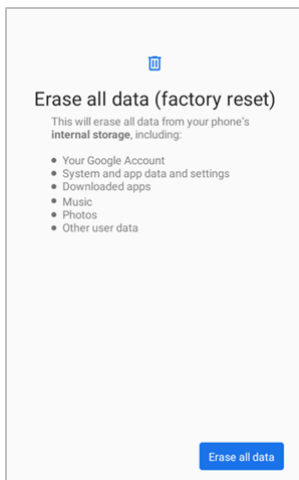
Navigate to **Settings > System > Advanced > Reset options**.

2

Tap **Erase all data (factory reset)**.

3

Please be aware that factory reset will erase all user data. Tap **Erase all data** to start the factory reset



4

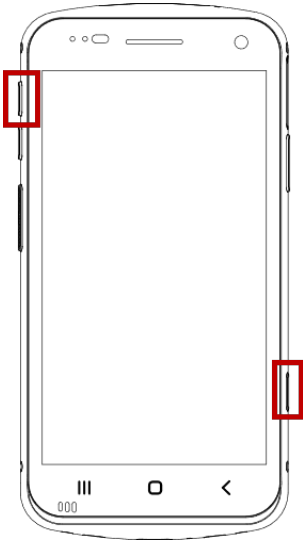
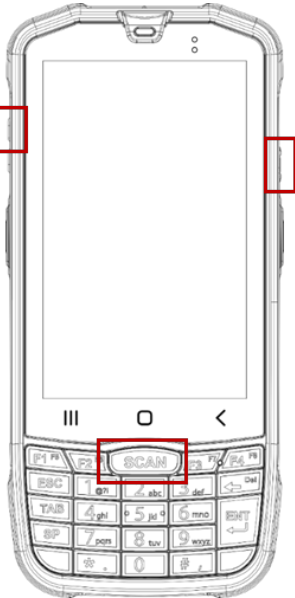
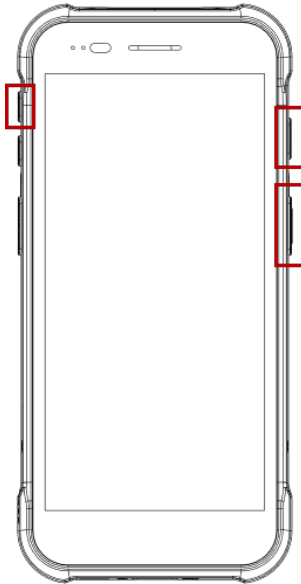
Tap **Erase all data** again to confirm the factory reset

- If you cannot turn on the device,



1

Press and hold following button combination simultaneously when turning on the device

PM30	PM67	PM75
Power + Volume Up	Power + Volume Up + Scan (Front)	Power + Volume Up + Scan (Right)
		

2

After short vibration, release the buttons. Now your device is entered Android Recovery mode

3

Using the keys below, select '**Wipe data/factory reset**'

	PM30 & PM75	PM67
<b>Move down/up</b>	Volume down / up	Volume down / up
<b>Select the menu</b>	Power button	Power button or Enter key

4

After wiping the data, select '**Reboot system now**'



#### RELATED ARTICLES

- [Android Upgrade on Point Mobile Models](#)
- [How to Barcode Scanner Factory Reset](#)
- [PM351 Factory Reset](#)
- [PM45 Factory Reset](#)
- [PM451 Factory Reset](#)

