

Automatic Call Answering

If you are using a headset (available to phone call) and want to answer call automatically, use the Automatic Answering function.

Find the detail of this function and how to set from this article.

To use Automatic Answering function, SIM card is required.

APPLIES TO

Point Mobile **mobile computer / rugged smartphone** devices with Android 5 and above

(Except PM90)

<Android 11>

- PM67: 67.01 (Dec 23 2021) and higher
- PM75: 75.01 (Dec 23 2021) and higher

What is Automatic Answering?

When Automatic Answering function is turned on, your device picks the incoming calls up automatically within 2 seconds while connected to Bluetooth device (available for phone call) or headset.

Automatic Answering function is **disabled** by default.


How to Set Up?


General

1

Launch **Phone**.

2


Tap  on the corner, and tap **Settings**.

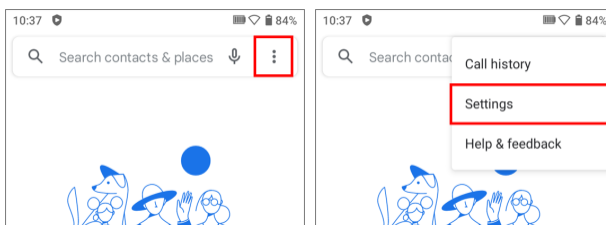

3


Select **Calls**.

3

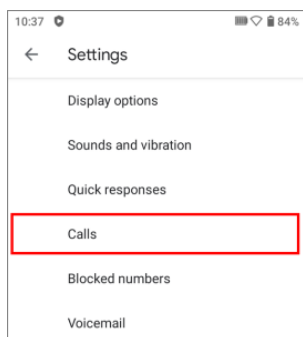

4

Turn on the **Automatic Answering** switch to use the function.
(Default: Disabled)

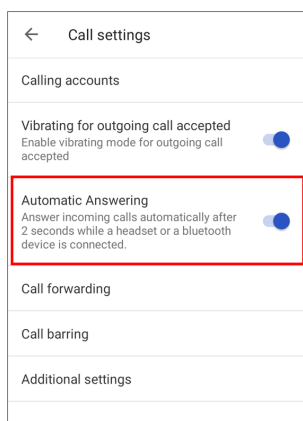


(Screenshots are taken from PM75 75.01 (Dec 23 2021))

PM85, PM45 (A8)


1

Go to **Settings > Network & Internet**.

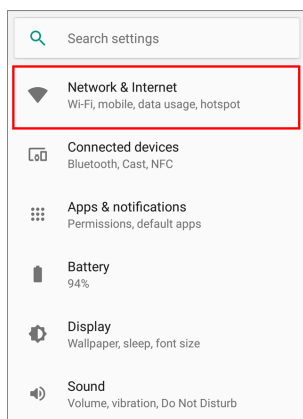


2

Select **Call settings**.

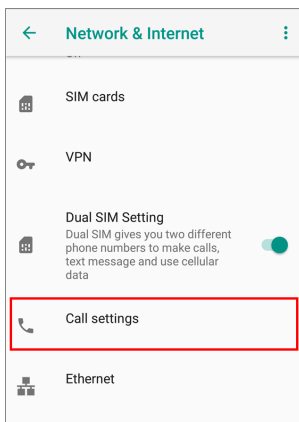

3

Turn on the switch to use the **Automatic Answering** function.

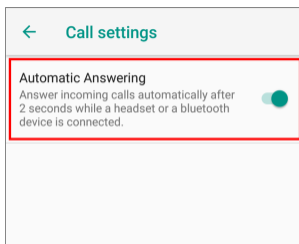


(Screenshots are taken from PM85 85.14 (Dec 03 2021))


PM85, PM45 (A9)

1

Launch **Phone** .


2

Tap  on the corner, and tap **Settings**.

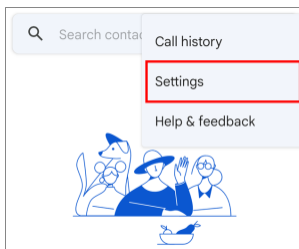


3

Go to **Calling accounts > (Carrier name)**

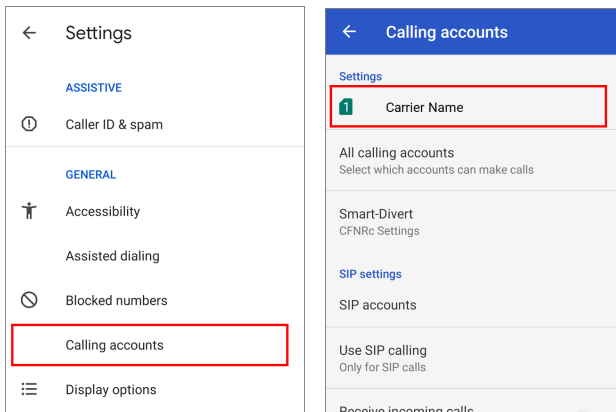

4

Turn on or off the **Automatic Answering** switch.

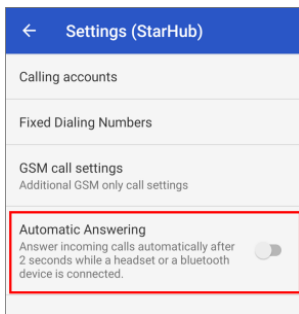

(Screenshots are taken from PM45 45.75 (Dec 07 2021))

RELATED ARTICLES

- [Phone App Package & Activity Name](#)
- [Use VoLTE / VoWiFi calls](#)