

Set Low Battery Warning Level

The battery is one of the factors that influencing the device performance.
If the remaining battery level is too low, some actions instantly consuming a lot of voltage may not operate properly.

Therefore, realizing immediately that the battery is low is important so that the users replaces or charges the battery.

This article describes how to set the warning level of low battery.
Set a warning level and give users enough time to act on a low battery.


APPLIES TO

All Android powered Point Mobile devices

Set Low Battery Warning Level

1 Navigate to **Settings > Battery**.

2 Tap **Battery Warning Level**

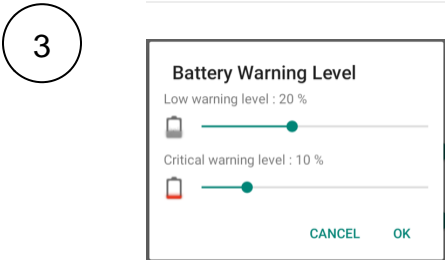

Set low level and critical level to be used to notify user that the battery is low.
The critical level cannot be over the low level, and the limitation of the levels are 50%.

What is different?	
Low level notification	Critical level notification
System notification	System notification + LED notification
<div><div>Settings</div><div>Battery may run out soon 19% remaining</div><div>TURN ON BATTERY SAVER</div></div>	<div><div>Settings</div><div>The battery is very low 15% remaining</div><div>TURN ON BATTERY SAVER</div></div>

4 Tap **OK** to save the changes.



RELATED ARTICLES

Content by label

There is no content with the specified labels