

Check Serial Number

Find the way to check serial number of your device.

Using Device Surface

Common

Most of the models have the S/N label on the rear side of the device inside the battery slot.
(PM85, PM90, PM451, PM500, PM75, etc.)


- 1

Remove the battery (and battery cover if exists).
- 2

See the rear side (battery slot) of the device.
- 3

Check the **S/N** from the label.

ex) PM75 label

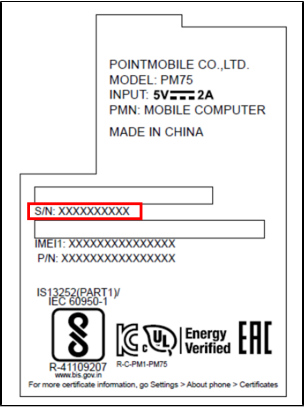

PM3, PM30

See the rear side of the device and find the **S/N** from the label.



PM5

Remove the battery and find the **S/N** from the label.




PM550 / PM560

See the rear-bottom side of the terminal under the handle, and find **S/N**.



RFID readers

See the top of the retention fixture and find **S/N** from the label.

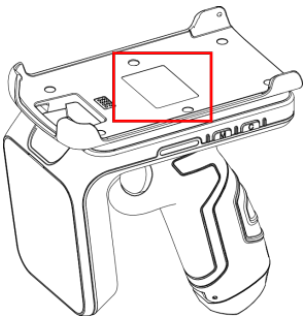

RELATED ARTICLES

- [DevInfo : How to Get Device Information File](#)
- [Bug Report - How to Take BugReport File](#)
- [Check OS/FW Version](#)