

Connect RFID Readers

APPLIES TO

Point Mobile RFID Readers

- RF851, RF300, RF750, RF900

Point Mobile host devices

- PM85, PM30, PM75, PM90, PM550

Compatible Host Devices

Point Mobile RFID readers are compatible only with Point Mobile host devices.

Other Android devices or iOS devices not manufactured by Point Mobile cannot connect RFID readers because the RFID service operates Point Mobile Android devices only.

Required App

To connect and configure the RFID reader, you must install **RFIDControl** app on your host device.

How to Connect?

There are two ways to connect RFID reader, **Wired** and **Bluetooth**.

Depending on the host device's model, the Wired connection may not available.

| | Wired option | Bluetooth option |
|------------------|----------------|------------------|
| PM85, PM550 | X | O (Default) |
| PM30, PM75, PM90 | O (Default) | O |

See detailed guides of each connection method in below links.

- Wired connection: [RFID Reader Supporting Wired Connection](#)
- Bluetooth connection: [Bluetooth Connection \(RFIDControl User Guide\)](#)

To see the full guide of RFIDControl, you need to log in. Contact Point Mobile team to get an account.

RELATED ARTICLES

- [RFID Reader Supporting Wired Connection](#)