

How to Change RFIDControl Password (Preview)

This article is preview version of [How to Change RFIDControl Password](#).
You must login to read full version. Contact Point Mobile team to get an account.

To change the RFID configuration, profile, and wedge settings, user must enter admin password.
The password avoid unauthorized changes of RFID readers and RFIDControl app operation.

APPLIES TO

- RFIDControl: v3.0.0 and later
- RFIDControl Configuration Tool: v2.1.3 and later

How to Change Password?

You can change or remove the password using RFIDControl Configuration Tool (PC tool).

Tool download is available on [Service Portal](#).
If you don't have an account to access, please ask your admin or local reseller.

If you get the tool,

1. Execute RFIDControl Configuration Tool.
2. Select **Set Password** checkbox under the Admin password section.

Admin Password

Set Password ☐

Unset Password ☐

Current password

New password

Password Repeat

3. Fill each field.

Field	Description
Current Password	Enter the current password. The default password is 1010.
New Password	Enter the new password.
Password Repeat	Enter the new password again to avoid typo mistake.

4. Scroll down the screen and click **Generate Jsosns**.
5. ...

Want to Read More?
This article is preview version of [How to Change RFIDControl Password](#).

You must login to read full version. Contact Point Mobile team to get an account.

RELATED ARTICLES

- [RFID Configurations \(Preview\)](#)
- [Auto Update RFID Configuration via RFID Control](#)
- [Adjust RFID Reading Speed \(Tx Cycle\)](#)
- [Change Configuration of RFID Sled](#)
- [Filtering RFID tag](#)