

Charging PM30 & RF300

This article describes the charging scenario of individual or assembled RF300 and PM30.

In most ways of charging, the devices are charged individually. But in some charging methods, the devices will be charged simultaneously or sequentially.

See the following instruction.

APPLIES TO


PM30

RF300

Way of Charging

There are 5 ways to charge the devices in assembled state.


- Connect USB cable to RF300
 - From Power adapter
 - From PC

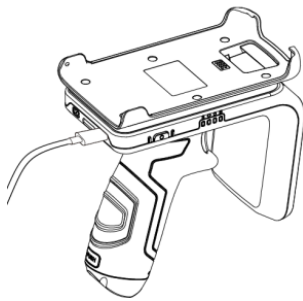

- Connect USB cable to PM30 (from Power adapter or PC)
 - From Power adapter
 - From PC



- Using SSC (Single Slot Cradle)

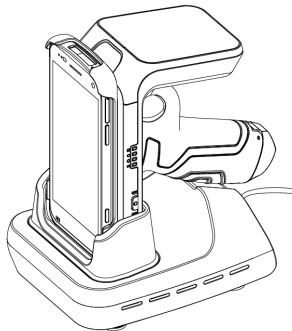

Charging Scenario

		RF300	RF300 + PM30 (Mounted)	PM30
Connect cable to RF300	USB-C with power adapter	Charging RF300	Charging RF300 → PM30 sequentially (After RF300 is fully charged, PM30 starts charging)	-
	USB-C with PC	Charging RF300 slowly	Charging only RF300 slowly	-
Connect cable to PM30	USB-C with power adapter	-	Charging only PM30	Charging PM30
	USB-C with PC	-	Charging only PM30 slowly	Charging PM30 slowly
Cradle (SSC; Single Slot Cradle)		-	Charging RF300 & PM30 simultaneously	-



Note

- When a charger is connected to PM30, only PM30 will be charged regardless of whether the RF300 is mounted or not.
- To charge the devices at the same time, use SSC (Single Slot Cradle). The cradle is sold separately.



RELATED ARTICLES

- [Using PMBooster with PM30](#)
- [Cradle Charging \(Charging Animation\)](#)